


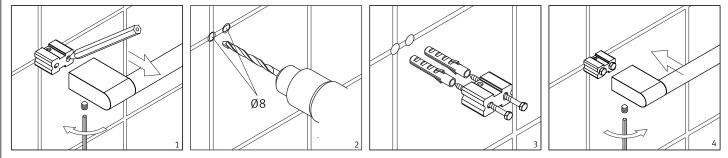

### **Installation Guideline**

- Using a suitable drill bit, drill holes in the marked positions to a suitable depth. If drilling through tile, use a ceramic drill bit.
- Insert wall plugs level with the surface of the wall. If fitting to a tiled surface, wall plugs should be inserted below the tile surface to avoid cracking. NB. For plasterboard walls, specialist fixings should be purchased, available from any DIY or hardware store.
- Fig.4 Ensure the retaining grub screw is installed securely.



## **Care Instructions**


- Do not use abrasives or solvents when cleaning this product.
- Wipe off all water spillages as soon as possible using a soft, damp cloth.

FI#10 015 R200616 Ver No.1.0 Oct 2020




#### MAKING **BATHROOMS** BEAUTIFUL


# **Grab Bar with Grip - Fitting Instructions**





# **Installation Guideline**

- Using a suitable drill bit, drill holes in the marked positions to a suitable depth. If drilling through tile, use a ceramic drill bit.
- Insert wall plugs level with the surface of the wall. If fitting to a tiled surface, wall plugs should be inserted below the tile surface to avoid cracking. NB. For plasterboard walls, specialist fixings should be purchased, available from any DIY or hardware store.
- Fig.4 Ensure the retaining grub screw is installed securely.

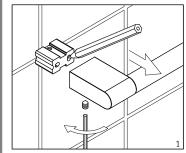

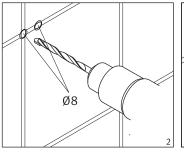

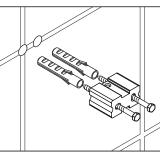

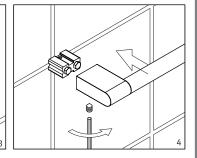

# **Care Instructions**

- Do not use abrasives or solvents when cleaning this product.
- Wipe off all water spillages as soon as possible using a soft, damp cloth.